



## POPCORN MACHINE OPERATING INSTRUCTIONS

### CONTROLS & THEIR FUNCTIONS

There are 3 switches on the popper.

#### LIGHT & WARMER SWITCH

Turns on the heat to the bottom corn pan & heat light.

#### KETTLE MOTOR SWITCH

Turns on the motor, which drives kettle agitator shaft.

#### KETTLE HEAT SWITCH

Turns on the heat element.

### AMOUNT OF POPCORN & OIL

We recommend coconut oil, however any oil can be used. Popcorn popped in coconut oil stays fresh longer. Coconut oil does not leave black deposits in your kettle like other oils.

Popping corn – 4 oz (120ml)

Oil – 1 to 1.30oz (30ml)

### POPPING INSTRUCTIONS

1. Turn kettle heat & kettle motor switch ON.
2. Make test pop with 3 kernels of corn & ½ oz (15ml) of oil.
3. Load pre-measured popcorn & oil into kettle
4. Do not lift kettle lid after popcorn is placed in kettle
5. When corn has popped, dump kettle
6. Repeat cycle starting with item #3; always pop 3-5 batches for best popcorn.

Thank you.